



Brake Check Infra-red Printer

Configuration

Turn Brake Check on. Push 'Menu' until 'Setup' is illuminated.



Push 'Enter', it will then display PRT.



Push 'Enter', it will now display 'no1'. Press 'Menu' to get 'no2' displayed, then 'Enter'.



Brake Check is now set up for Fast Print.

Incorrect set-up will cause slow printing.

AUTOTEST SERVICING NZ

Address	Unit 2 - 7 Michelle Rd, Wigram, Christchurch
Phone	03 343 3721
Email	service@autotest.co.nz
Website	autotest.co.nz



Brake Check Infra-red Printer

Instructions for use

Press the Mode button to turn the printer on.

Once vehicle test is complete, place Brake Check & printer in position shown below—no more than 30cm between them. Note the transmitter & receiver must be aligned.



Push 'Print' on the Brake Check.

Do not move the Brake Check before printing is complete

The printer will then turn itself off.

AUTOTEST SERVICING NZ

Address	Unit 2 - 7 Michelle Rd, Wigram, Christchurch
Phone	03 343 3721
Email	service@autotest.co.nz
Website	autotest.co.nz